EUCHNER CLEANING



1) Remove Top Block



2) Carefully Pry Open



3) Clean Inside Piston



4) Clean All Parts Inside Top Block with Rubbing Alcohol

5) Press Together

6) Pull the Below Lever Back (Left Figure) Put Top Block in Place & Hold Down While Replacing the Screws





7) Confirm Lever Snaps Back (Right Figure) When Actuator is Inserted

Note: TCT assumes no responsibility for parts damaged during cleaning.

This guide is for general reference only.