


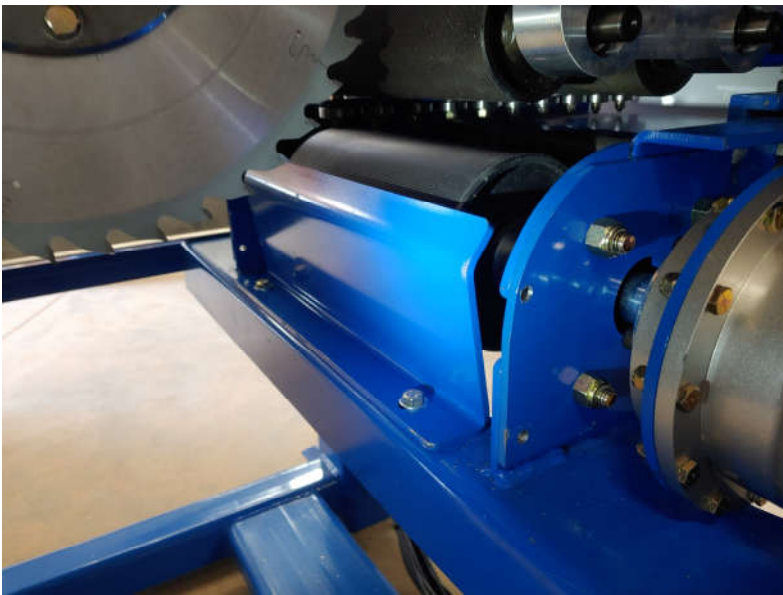

Mount deflector bracket in front of outfeed roller.  
Confirm guard is parallel with roller.  
Secure by drilling two holes and mount with enclosed hardware.



Confirm guard has at least a 1/4" gap between guard and roller to prevent drag.